

Compact Laser Displacement Sensor

Standard type

High-function type

HL-G1□-A-C5

HL-G1□-S-J

0631996

MJE-HLG1(06) No.0042-42V

Thank you for purchasing the product of Panasonic Industrial Devices SUNX Co., Ltd. Be sure to read this manual before use in order to ensure the safe and proper operation of this product. Keep this manual at hand for your reference after reading it through.

Download the HL-G1 Series User's Manual (PDF) from Panasonic Industrial Devices SUNX Co., Ltd. (<http://panasonic.net/id/pidsx/global>). Be sure to refer to the User's Manual for information in detail before making settings in the control panel of the sensor head.

WARNING

- This product is intended to detect the objects and does not have the control function to ensure safety such as accident prevention.
- Do not use the product as a sensing device to protect human body.
- Please use the products that comply with local laws and standards for human body protection specified by e.g., OSHA, ANSI and IEC.
- Install a fail-safe device when the product is used for the purpose that has a possibility of physical injury or serious extended damage.
- Do not use the product in the atmosphere of flammable gas, to prevent explosion.

BEFORE USE

- Before using the product, check the sensor head model and contents of packing.

Panasonic

LASER SENSOR

HL-G103-S-J

Sensor head model

Check the model name of product at the top of sensor head.

Packing

Check that all of the following components are included in the package.

- 1 sensor head unit
- 2 Instruction manual (Japanese / English: 1, Chinese / Korean: 1)
- Laser warning labels (one set)

1 OVERVIEW

- This product is a compact laser displacement sensor incorporating a digital display and controller functions.
- The standard type has three outputs plus analog outputs (current and voltage outputs), thus supporting multi input signals.
- The high-function type incorporates serial communications functions in addition to the specifications of the standard type, and can be easily controlled by host devices.
- One out of five measurement distances can be selected for each type that support both NPN and PNP outputs.

2 CAUTIONS ON HANDLING LASER LIGHT

- In order to prevent the accidents by laser product and protect the users, IEC, JIS, GB and FDA establish the following standards respectively.

IEC : IEC 60825-1-2007 (EN 60825-1-2007)

JIS : JIS C 6802-2005

GB : GB 7247.1-2012

FDA : PART 1040(PERFORMANCE STANDARDS FOR LIGHT-EMITTING PRODUCTS)

These standards classifies laser products according to the level of hazard and provide the safety measures for respective classes.


Laser hazardous class

Classification according to IEC 60825-1-2007 (JIS C 6802-2005)

Class	Model	Description of hazardous evaluation
Class 2	HL-G1□-A-C5 HL-G1□-S-J	Visible beam, low power. Blink response of eye affords protection.

• WARNING label

<English>

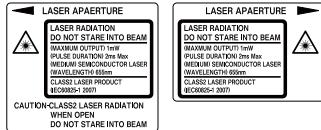


<Chinese>




注意 - 請勿在2次激光輻射時
勿直視光束。


<Japanese>

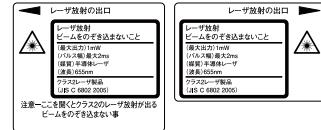


<Korean>

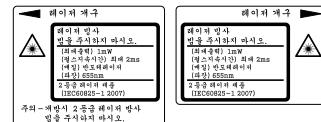

<Label position>

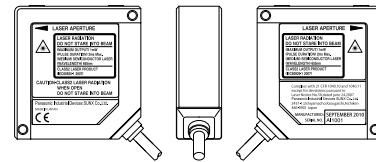

- Install the product so the laser beam comes higher or lower than eye level in order not to watch the beam directly during operation. Laser safety distance (Nominal Ocular Hazard Distance: NOHD) is approx. 0.4 m. The laser beam must be terminated at the end of its path by a diffuse reflector or an absorber.
- Please contact Panasonic Industrial Devices SUNX if the system breaks down. It is not equipped with a function that stops laser radiation automatically during disassembling the sensor head. The users therefore may be exposed to laser beam in disassembling the sensor head.
- Do not use the system in the manner other than specified in this Instruction Manual.

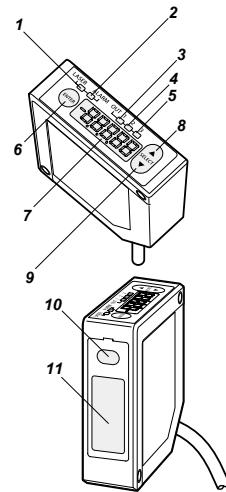3 I/O BLOCK AND NOMENCLATURE

Name	Function	Wiring color	
A(V)	Analog voltage output	Shield single conductor	Black
AGND	Analog ground		
A(I)	Analog current output	Shield single conductor	Gray
AGND	Analog ground		
OUT1	Judgment output 1	Black	
OUT2	Judgment output 2	White	
OUT3	Judgment output 3 or alarm output	Gray	
TM	Timing input	Pink	
MI	Zero-set, Reset, Memory change, Teaching, Save, and Laser control inputs	Violet	
NP	NPN / PNP type switching input	Pink / Violet	
+SD	Transmission data	Twisted pair wire	Green
-SD	Transmission data	Twisted pair wire	Sky Blue
+RD	Reception data	Twisted pair wire	Orange
-RD	Reception data	Twisted pair wire	Yellow
SG	Signal ground	Shield	
+V	24 VDC input for power supply	Brown	
0V	Power supply ground	Blue	

* No SD/RD terminals are prepared for HL-G1□-A-C5 standard types.

1 Laser Indicator (LASER)

2 Alarm Indicator (ALARM)

3 OUT1 Indicator (OUT1)

4 OUT2 Indicator (OUT2)

5 OUT13 Indicator (OUT3)

6 [ENTER] Key

7 Digital Display

8 [UP] Key

9 [DOWN] Key

10 Emitter

11 Receiver

4 SPECIFICATIONS

Model No.	Standard type	HL-G103-A-C5	HL-G105-A-C5	HL-G108-A-C5	HL-G112-A-C5	HL-G125-A-C5									
Measurement method															
Measurement center distance	30mm	50mm	85mm	120mm	250mm										
Measurement method	±4mm	±10mm	±20mm	±60mm	±150mm										
Beam source	Red semiconductor laser Class 2 (JIS / IEC / GB / FDA laser notice No. 50) Max output: 1mW, Emission peak wavelength: 655nm														
Beam diameter (Note 2)	0.1 × 0.1mm	0.5 × 1mm	0.75 × 1.25mm	1.0 × 1.5mm	1.75 × 3.5mm										
Beam receiving element	Cmos image sensor														
Resolution	0.5μm	1.5μm	2.5μm	8μm	20μm										
Linearity	±0.1%F.S.					±0.3%F.S.									
Temperature characteristics						±0.08%F.S./°C									
Supply voltage	24V DC ±10% including ripple 0.5V (P-P)														
Current consumption	100 mA max.														
Sampling cycle	200μs, 500μs, 1ms, 2ms														
Analog output	Voltage	Output range: 0 to 10.5 V (normal), 11 V (at alarm) Output impedance: 100Ω													
	Current	Output range: 3.2 to 20.8 mA (normal), 21.6 mA (at alarm) Load impedance: 300Ω max. Judgment output or alarm output (switchable)													
NPN open-collector transistor / PNP open-collector transistor (switchable)															
OUT1	<Settings for NPN>		<Settings for PNP>		<Settings for PNP>										
OUT2	• Peak in-flow current: 50mA • Applied voltage: 3 to 24V DC (between output and 0V)		• Peak in-flow current: 50mA • Residual voltage: 2.8V max. (at in-flow current of 50mA)		• Peak in-flow current: 50mA • Residual voltage: 2.8V max. (at in-flow current of 50mA)										
OUT3	• Residual voltage: 2V max. (at in-flow current of 50mA) • Leakage current: 0.1mA or less		• Leakage current: 0.1mA or less		• Leakage current: 0.1mA or less										
Output operation															
Short-circuit protection															
NP switching input	Open when the output is ON.														
Timing input	At 0V: NPN open-collector output At supply voltage of 24V DC: PNP open-collector output														
Multiple input	NPN operation: When connecting or connected to 0V (depending on settings) PNP operation: When connecting or connected to positive terminal of external power supply (depending on settings)														
Communications interface (high-function type)	Zero set, reset, Memory change, Teaching, Save, or Laser control depending on input time. NPN operation: Depending on time to connect 0 V PNP operation: Depending on time to connect positive terminal of external power supply														
Indicator	Laser radiation indicator	RS-422 or RS-485													
	Alarm indicator	Baud rate: 9,600 / 19,200 / 38,400 / 115,200 / 230,400 / 460,800 / 921,600 bps Data length: 8 bits, stop bit length: 1 bit, parity check: none, BCC: yes, end code: CR													
	Output indicator	Green LED ON at laser radiation													
	Digital display	Orange LED ON when measurement is disabled due to insufficient amount of light													
Protective structure															
Pollution degree															
Insulation resistance															
Dielectric Withstand															
Vibration resistance															
Vibration resistance															
Ambient illumination (Note 3)															

Ambient temperature	-10 to 45°C (No dew condensation or icing allowed), At storage: -20 to 60°C
Ambient humidity	35 to 85%RH, At storage: 35 to 85%RH
Ambient Height	2,000m or less
Material	Casing: PBT, Front cover: Acrylic, Cable: PVC
Cable length	Standard type: 5m; high-function type: 0.5m
Cable extension	High-function type: extendable to 20 m with an optional extension cable (sold separately).
Mass	Standard type: Approx. 70g (without cable), approx. 320g (including cable), and approx. 380g (with packing)
Applicable standards	Conforming to EMC Directive

Notes: 1) The following measurement conditions are applied unless otherwise specified; power voltage: 24V DC, ambient temperature: 20°C, sampling cycle: 500μs, average number of sampling times: 1,024 times, measurement center distance, and measurement object: white ceramic.
 2) The diameter is the size of the object at the measurement center distance and determined by $1/e^2$ (approximately 13.5%) of the center beam intensity. The reflectance around the detecting point may be higher than at the point due to leak light outside the specified area, and this may affect the measurement value.
 3) Variance is ±0.1%F.S. or less depending on the ambient illuminance.


5 CAUTIONS

Connections

- Be sure to turn OFF the power supply before connecting or disconnecting any connectors.
- When connecting or disconnecting the connectors, be sure to hold the connector area not to apply extra force to the cable.
- Be careful not to touch terminals or to let foreign objects get in the connector after disconnecting connectors.
- Be careful not to apply force to around the connector of sensor head cable and extension cable. Do not bend the cables near connectors, which causes disconnection of the cable.
- When moving the sensor head during operation, install not to bend the cable during movement. Use replaceable extensions cable where the cable needs to be bent.

Wiring

- Do not roll up the sensor cable (bundle in parallel) with other wirings. Keep it at least 100mm away from other wires. Cables should be separated from high voltage and power circuit lines. If it is unavoidable, shield it by running through a conductive material such as grounded electrical conduit.
- Install the product as far away as possible from noise source such as high-voltage lines, high-voltage device, power lines, power device, machines which generate a large starting and stopping surge, welding machines and inverter motor.
- Do not pull the cable with a force more than 29.4N when wiring the cable when the sensor head is fixed. The cable may be bent with a radius of 30mm or over. However, do not bend the cable within 20mm of the sensor head.

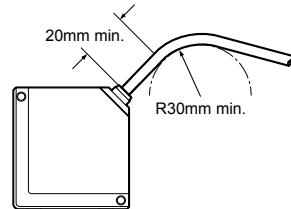

Warming Up


- Allow at least 30 minutes of warming up after turning on the power to ensure the performance of the product.

Environment

- Mount the sensor head to an aluminum or steel plate with a minimum surface area of 200cm² if the ambient temperature is 40°C or higher. In the case of installing two or more sensor heads in parallel, mount each sensor head to an aluminum or steel plate with a minimum surface area of 200cm² and make sure that the ambient temperature does not exceed 40°C.
- The life of the semiconductor laser depends on the ambient temperature during use. When using the product near a heat source, take measures to keep the ambient temperature of the sensor head as lower as possible. Mount the sensor on a device having good heat radiation because the sensor itself also generates heat.
- Keep the emitter surface and the receiver surface clean, not to attach light refractors such as water, oil and fingerprints, or light blockers such as dust and dirt. When cleaning these parts, wipe them off using a soft lint-free cloth or lens cleaning paper.
- Install the sensor head at where extraneous light (such as sunlight or light which has the same wavelength as laser beam) do not enter the receiver. If high accuracy is required, install a light shield plate or the like on the sensor head.
- The sensor head has protection against immersion, while the connectors are not structurally dustproof, waterproof, or corrosion-resistant. Do not use the product underwater or in the rain.
- Do not use the product in dusty places or that exposed to flammable or corrosive gases, droplet, direct sunlight, severe vibration or impact.


6 I/O CIRCUIT

• NPN Type

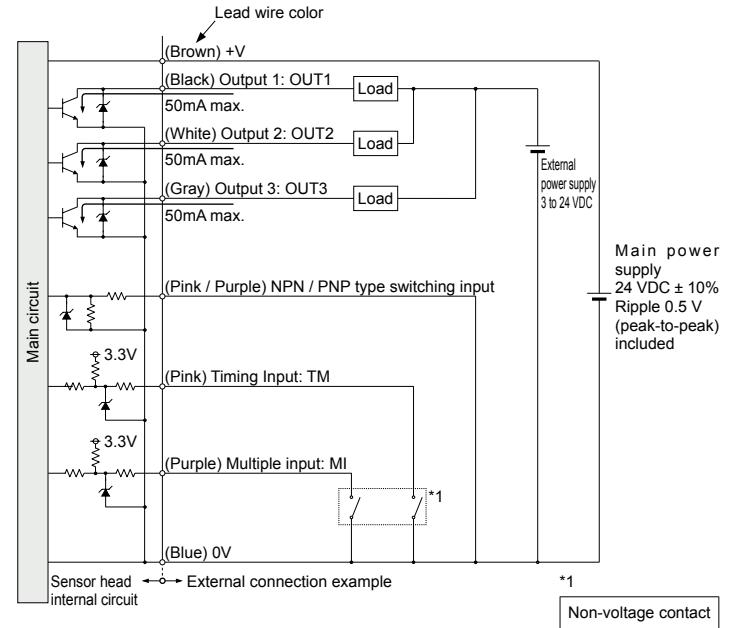

Refer to the HL-G1 Series User's Manual for RS-422 / 485 wiring.

• PNP Type

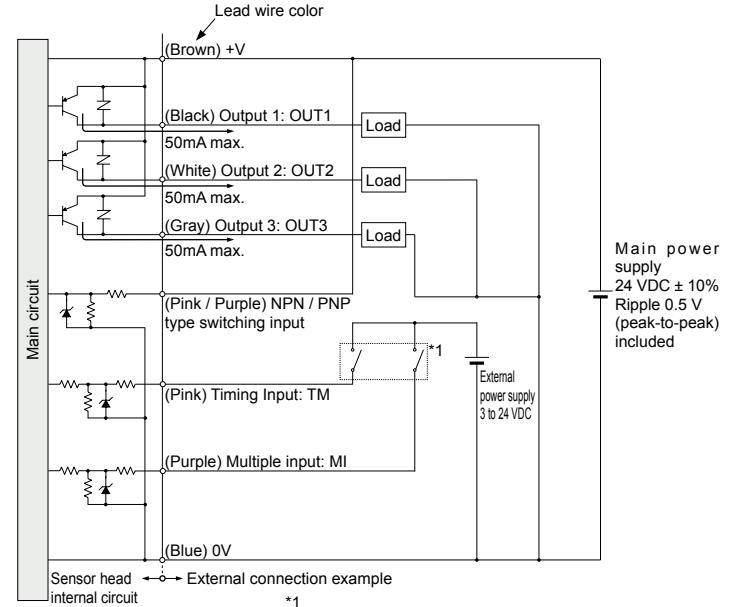


Refer to the HL-G1 Series User's Manual for RS-422 / 485 wiring.

7 APPLICABLE STANDARDS / REGULATIONS

- “SPECIFICATIONS” shows the product, the following standards/regulations are relevant.

EC Directives: EMC directive 2004/108/EC

- Make sure that the length of signal and power lines connected to the product is less than 30m in order to meet CE marking requirements.
 Attach a ferrite core to the head cable as shown.
 Recommended ferrite core: SEIWA ELECTRIC MFG. Co., Ltd.E04SR200935AB or equivalent one.

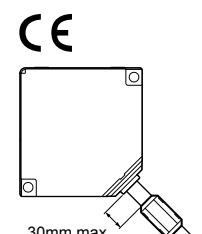

• Contact for CE

Panasonic Marketing Europe GmbH Panasonic Testing Center
 Winsbergring 15, 22525 Hamburg, Germany

Panasonic Industrial Devices SUNX Co., Ltd.

<http://panasonic.net/d/pidsx/global>

Overseas Sales Division (Head Office)
 2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan
 Phone: +81-568-33-7861 FAX: +81-568-33-8591

About our sale network, please visit our website.

PRINTED IN JAPAN

© Panasonic Industrial Devices SUNX Co., Ltd. 2013